

2009 Jaguar Special Tool Listing

Tool Number Tool

100 - Overall Vehicle

100-005A	PULLER
100-012	IMPULSE EXTRACTOR-MAIN
100-012-01	ADAPTOR FOR 100-012
100-012-02	ADAPTOR SHAFT FOR 204-226
100-012-03	ADAPTOR - SLIDE HAMMER (SHAFT REMOVAL)
100-013	DRIVER HANDLE
100-019	HAND PRESS
100-019-01	ADAPTOR - HAND PRESS

204 - Suspension

204-003	REAR HUB SPACER REPLACER
204-011	HUB REMOVER
204-112	SPRING COMPRESSOR
204-116-03	REMOVER/REPLACER ADAPTOR
204-116-05	REMOVER/REPLACER ADAPTOR
204-116-06	REMOVER/REPLACER ADAPTOR
204-116-08	REMOVER/REPLACER ADAPTOR
204-159	LEVER, WHEEL KNUCKLE
204-167-01	ADAPTOR SPRING
204-179	SPRING COMPRESSORS
204-183B	SOCKET SET - WHEEL NUTS ** UK MARKET ONLY **
204-192	FRONT SUSPENSION BALL JOINT SPLITTER
204-193	FRONT HUB REMOVER
204-194	FRONT HUB REMOVER COLLETS
204-196	FRONT HUB REPLACER
204-197	FRONT HUB BEARING REMOVER
204-198	FRONT HUB BEARING REPLACER
204-199	UPPER WISHBONE BALL JOINT INSTALLER
204-200	UPPER WISHBONE BALL JOINT REMOVER
204-201	MONO-STRUT BUSH REPLACER
204-214	LOWER WISHBONE BUSH REMOVER
204-226	HALF SHAFT SPLILLER
204-243	REMOVER/REPLACER FRONT MOUNTING BUSH (DIFFERENTIAL)
204-245	REPLACER FRONT MOUNTING BUSH (DIFFERENTIAL) FORCING SCREW FRONT MOUNT BUSH REMOVER (DIFFERENTIAL)
204-246	
204-264	PINION SEAL REPLACER
204-279	REPLACER - BUSH
204-280	REPLACER - BUSH
204-293	BALL JOINT SPLITTER REAR HUB CARRIER BUSH REMOVER SUPPORT CUP TIE MOUNTING
204-300	
204-301	REAR HUB CARRIER BUSH REMOVER PUSHER TIE MOUNTING
204-302	REAR HUB CARRIER BUSH INSTALLER PUSHER TIE MOUNTING

204-320	REAR S/F MOUNTING BUSH REM/REP FORCING SCREW
204-327	BALL JOINT SPLITTER
204-333	REMOVER - BUSH
204-334	REPLACER - BUSH
204-335	RECEIVER SUPPORT - BUSH
204-336	REMOVER - BUSH
204-337	REPLACER SUPPORT - BUSH
204-338	REPLACER - BUSH
204-339	RECEIVER SUPPORT - BUSH
204-340	REPLACER - BUSH
204-341	REPLACER SUPPORT - BUSH
204-342	REMOVER - BUSH
204-463	RECEIVER - BUSH
204-464	GUIDE INSTALLER
204-476A	SPRING COMPRESSOR
204-477	SOCKET AND ADAPTOR DIFF REAR MOUNTING BOLT REM/REP
204-484	RIDE HEIGHT MEASURING TOOL
204-725	SUPPORT WHEEL KNUCKLE
204-726	REMOVER WHEEL CARRIER AND BEARING
204-727	INSTALLER WHEEL BEARING

205 - Driveline System

205-461	HALFSHAFT SEAL PROTECTORS
205-491	HUB PULLER
205-491-01	ADAPTOR FOR 205-491
205-532	REPLACER - SEAL
205-533	REMOVER - BUSH
205-534	RECEIVER - BUSH
205-535	PROPSHAFT ALIGNMENT TOOL

206 - Brake System

206-066B	A.B.S. ROTOR NUT SOCKET
206-080	REAR CALIPER PISTON RETRACTOR TOOL
206-081	HANDBRAKE PISTON RETRACTOR
206-082	RELEASE TOOL - ELECTRIC PARK BRAKE
206-082-01	LINK LEAD - ELECTRIC PARK BRAKE RELEASE TOOL
206-087	SOCKET

303 - Engine System

303-011	ENGINE - STAND
303-011-01	ENGINE STAND ADAPTOR
303-021	ENGINE SUPPORT BRACKET
303-102	INSTALLER, CRANKSHAFT REAR SEAL
303-1067	REAR ENGINE LIFTING EYE (PUMA DIESEL ENGINE)
303-1068	ENGINE SUPPORT BRACKET
303-1073	REMOVER - OIL SEAL
303-1093	ALIGNER

303-1096	ALIGNER/INSTALLER
303-1116	TIMING PIN, FLYWHEEL.
303-1117	TIMING PIN
303-1118	REMOVER - CAMSHAFT OIL SEAL
303-1119	INSTALLER - CAMSHAFT OIL SEAL
303-1123	LOCKING TOOL - FLYWHEEL
303-1126	TIMING PIN
303-1127	REMOVER - FUEL INJECTOR
303-1128	REMOVER - OIL FILTER
303-1129	LIFTING KIT
303-1131	ADAPTOR DIESEL COMPRESSION TEST
303-1132	CHECKING PIN
303-1151	LOCKING TOOL, FUEL PUMP SPROCKET
303-178	CRANKSHAFT REAR SEAL INSTALLER
303-191	FRONT PULLEY HOLDING WRENCH
303-191-02	FRONT PULLEY LOCK ADAPTOR
303-191-03	ADAPTOR CRANKSHAFT PULLEY
303-397	HOSE CLIP REMOVER
303-530	CAMSHAFT TIMING TOOL.
303-531	CRANKSHAFT SETTING/LOCKING PEG
303-532	TENSIONER - TIMING CHAIN
303-533	TIMING CHAIN WEDGES
303-536	ENGINE REAR LIFTING BRACKETS
303-541	REMOVER - CRANKSHAFT FRONT OIL SEAL
303-542	REPLACER - CRANKSHAFT FRONT OIL SEAL
303-588	CRANKSHAFT PULLEY/DAMPER REMOVER
303-631	ACCESSORY BELT DETENSIONER
303-645	CRANKSHAFT SETTING TOOL
303-654	VVT SETTING TOOL
303-676	RELEASE TOOL, BELT TENSIONER
303-677	SOCKET, WHEEL HUB NUT
303-679A	REMOVER INSTALLER
303-680	SOCKET - CYLINDER HEAD TEMPERATURE SENSOR
303-682	ALIGNER, OIL PUMP COVER
303-703	ACCESSORY BELT DETENSIONER
303-707	LIFTING KIT
303-711	ALIGNER - FUEL INJECTOR
303-750	INSTALLER - CRANKSHAFT FRONT SEAL
303-751	REMOVER - CRANKSHAFT FRONT OIL SEAL
303-752	WRENCH - OIL FILTER
303-D055	WRENCH STRAP UNIVERSAL
303-D121	CRANKSHAFT DAMPER REMOVER (3 LEG PULLER)
303-D121-01	THRUST PAD
307-010	TEST KIT - HYDRAULICS
307-358	REAR EXTERNAL OIL SEAL REPLACER
307-378	REAR SEAL REPLACER

307 - Automatic Transmission System

307-379	DIPSTICK
---------	----------

307-442 DRIFT - DRIVESHAFT
307-443 HANDLE - FOR DRIVESHAFT DRIFT
307-445 SETTING PLATE
307-446 LIMITER BRACKET - SHAFT
307-452 ADAPTOR - FILLER PLUG

308 - Manual Transmission and Clutch

308-208 REMOVAL AXLE SHAFT OIL SEAL
308-246 INSTALLER - SEAL
308-417 MANUAL TRANSMISSION INPUT SEAL REPLACER TOOL
308-418 REMOVER - INPUT SEAL
308-436 TRANSMISSION SELECTOR SETTING TOOL
308-441 CLUTCH CENTRALIZING TOOL

310 - Fuel Systems

310-044 DECOUPLER - SPRING LOCK
310-045 QUICK FIT CONNECTOR RELEASE TOOL
310-054 QUICK FIT CONNECTOR RELEASE TOOL
310-072A REMOVAL FUEL PUMP/SENDOR LOCKING NUT
310-129 DIAGNOSTIC TOOL
310-D005 DISCONNECT TOOL, FUEL LINE
416-001-01 ADAPTOR - HAND VACUUM PUMP
418-141 TEST LEAD, FUEL TANK SOLENOID VALVE
418-535 SECURITY TORX BIT
418-S065 WIRING HARNESS REPAIR KIT
418-S135 KIT - AIRBAG DEPLOYMENT
418-S411 WIRING HARNESS REPAIR KIT
418-S411-01 WIRING HARNESS REPAIR KIT
501-120 REMOVER - DRIVERS AIRBAG MODULE
JAG.JAG-073 RCM REFLASH TOOL
JAG-067-01 ADAPTOR PROPSHAFT BALANCER
JAG-067-02 ADAPTOR PROPSHAFT BALANCER
JAG-067-03 ADAPTOR PROPSHAFT BALANCER
JAG-067-04 ADAPTOR PROPSHAFT BALANCER
JAG-067-05 ADAPTOR PROPSHAFT BALANCER
310-076 QUICK FIT CONNECTOR RELEASE TOOL
310-110A HAND PRESSURE PUMP WITH ADAPTOR KIT
303-1436 ENGINE LIFTING BRACKETS REAR
303-1435 ENGINE LIFTING/SUPPORT BRACKET FRONT
303-1437 REACTION TOOL CRANKSHAFT DAMPER
303-1438 SOCKET LONG - CRANKSHAFT DAMPER
303-1439 PLATE CRANKSHAFT DAMPER REMOVAL
303-1440 STUD DAMPER REMOVER/REPLACEMENT
303-1441 REMOVER INSTALLER CRANKSHAFT DAMPER
303-1448 LOCKING TOOL RING GEAR
303-1433 ALIGNER FRONT CRANKSHAFT SEAL
303-1434 REMOVER/INSTALLER CRANKSHAFT FRONT SEAL
303-1445 LOCKING TOOL CAMSHAFTS

310-197	REMOVER INJECTORS
310-198	GUIDE INSTALLER INJECTOR TEFLON SEAL
310-199	CALIBRATION TOOL INJECTOR TEFLON SEAL
303-1447	TIMING TOOL
310-200	ALIGNMENT PINS FUEL RAIL INSTALLATION
303-1451	PRESSURE TEST CAP ENGINE OIL
303-1452	ROTATION TOOL CAMSHAFTS/VVT
308-626	INSTALLER HALF SHAFT SEALS
303-1450	SOCKET REMOVER/REPLACER SPARK PLUG
303-1482	TIMING CHAIN TENSIONER
JAG-092 OL	TOOL BOARD OVERLAY
JAG-093 P	PATCH SYSTEM

Tools can be ordered separately or in kit form as listed below.

XJ/XK KITS

JAG-020	MINIMUM STANDARD KIT (includes overlays and hooks)
JAG-020 UK	MINIMUM STANDARD KIT (as Jag-020 plus locking wheel nut kit)
JAG-020 USA	MINIMUM STANDARD KIT (does not include overlays or hooks)

S-TYPE/XF KITS

JAG-042	MINIMUM STANDARD KIT (includes overlays and hooks)
JAG-042 USA	MINIMUM STANDARD KIT (does not include overlays or hooks)
JAG-080	MINIMUM STANDARD KIT (Diesel markets only)

X-TYPE KITS

JAG-059	MINIMUM STANDARD KIT (includes overlays and hooks)
JAG-059 USA	MINIMUM STANDARD KIT (does not include overlays or hooks)
JAG-076	MINIMUM STANDARD KIT (Diesel markets only)